



Ei4200 Dew Point Monitor

Online Detection and Measurement

Version 1.3

Application

The Ei4200 Dew Point Monitor (DPM) detects condensation and measures the dew point of acid and other condensables in challenging industrial conditions. The direct measurement of the process gas dew point provides plant operators with information that would otherwise be an imprecise multi-variable equilibrium calculation. Whether used as an alarm to instantly detect leaks in sulfuric acid plants or to measure dew points in other industrial applications, the Ei4200 DPM technology removes the guesswork and provides real-time feedback.



Targeted Industries

The Ei4200 DPM is ideally suited to detect and measure the acid dew point in all industrial applications within the operating temperature range of the instrument. Applications include:

- Sulfuric Acid Production
- Copper Smelters
- Coal-Fired Utilities
- Refining and Petrochemical
- Pulp & Paper
- RTO's and Biomass
- Gas Turbines Combined Cycle



The Technology

The Ei4200 DPM measures conduction across a uniquely constructed sensor surface resulting from condensed substances, including sulfuric acid, below their dew points. The presence of a condensed liquid phase is determined by the resistance between two electrodes. When current is detected, the kinetic dew-point (or formation) temperature has been reached. The instrument has two operating modes: passive and active.

Passive Mode

Passive detection mode is mainly used for applications such as sulfuric acid production, where the instant detection of unwanted condensation is the primary objective. This mode consists of maintaining the sensor at process temperature and detecting the moment condensation appears, thus warning the plant of a potential problem.

Active Mode

Active mode is used for applications such as copper smelters and coal-fired utilities where the primary objective is to continuously measure the dew point temperature. In this mode, a regulated supply of air cools the sensor surface. The rate of cooling is tightly controlled to allow continuous monitoring of condensate conditions on the sensor. As soon as condensate is detected the associated sensor temperature is reported as the process dew point. The cooling air flow is then stopped, and the sensor is allowed to return back to the process gas temperature. The cycle is then repeated, and an updated dew point is reported.



Coal Power Plants & Other Industrial Applications

Acid Dew Point/SO₃/Ammonium Bisulfate Detection & Measurement

Direct Measurement of Sulfuric Acid Vapor

The Ei4200 DPM for monitoring Acid Dew Point/SO₃/Ammonium Bisulfate is an industry-proven instrument for measuring the species and levels of the target vapors in industrial gas streams. It can be placed anywhere downstream of the economizer, from the SCR inlet to the scrubber inlet.

The system works by controlling the boundary layer temperature between the flue gas and the sensor. Precisely controlled cycling between high and low temperatures results in accurate determination of the dew point of the flue gas condensables. In cases where the vapor is pure H₂SO₄, the system combines this information with gas moisture levels using mathematical analysis to provide a real-time estimate of SO₃ concentration.

SO₃ Formation in Flue Gas Streams

Many boiler operational parameters influence the degree of total SO₃ formation including:

- Fuel sulfur content
- Ash content and composition
- Convective pass surface area
- Gas and tube surface temperature distributions
- Excess air level
- Coal fineness
- SCR catalyst condition

As a result, the same coal burned in two different boilers, or in the same boiler at different operating conditions, can produce substantially different levels of SO₃. Assumption of the level of total SO₃ based on any one variable is inadequate.



The Challenge – Control of Sulfuric Acid

High sulfuric acid levels produce multiple detrimental effects including:

- ABS formation, corrosion, and fouling of heat exchangers and ductwork
- Increased carbon emissions through elevated air heater outlet temperature
- Formation of acid mist in the stack plume

Conversely, sulfuric acid has the beneficial effect of promoting fly ash collection in cold-side electrostatic precipitators. Successful control of sulfuric acid levels can have a significant impact on EGU performance.

Optimize the Processes with the Ei4200 DPM


There are many processes within the power plant environment that can be optimized by controlling sulfuric acid vapor concentration. By using the Ei4200 DPM, plants can:

- Directly measure SCR catalyst MOT which can benefit operations by reducing minimum stable load
- Improve heat rate through both the control of ABS and air heater cold-end temperature
- Avoid ESP back-end and duct corrosion
- Improve ESP performance through control of the acid dew point and using the acid dew point/ESP inlet temperature relationship
- Mitigate blue plume (acid mist)
- Optimize dry sorbent injection (DSI)


Ei4200 DPM Components & Features

Standard Components & Features


- **Probe (Image 1)**
 - 316 stainless steel standard, Hastelloy optional*
 - Houses sensor, heater, cooling line, & particulate blower
- **Sensor Assembly (Image 2)**
 - Field replaceable*
 - 100 times more sensitive than previous model*
- **Pneumatic, Electrical, and Communications Bundle**
 - Custom lengths
- **Control Cabinet (Image 3)**
 - Houses pneumatic controls, electronics, & HMI
 - 316 stainless steel*
- **Communications**
 - Modbus or 4-20 mA signal
 - Integrated remote access capabilities*
- **Sensor Temperature Control System**
 - Tightly regulated with mass flow controller*
 - Integrated sensors to measure air flow, temperature, and pressure*
- **Integrated Sensor Heater**
 - Internal to sensor, not exposed to process gas*
- **Integrated HMI**
 - IntelliSense™ Software*
- **Standby and Service Modes***
 - Protects probe during downtime and system upsets
- **Data Processing**
 - Automatic data processing and interpretation*
 - Customizable alarm settings*
- **Automatic Leak Check***
 - Pressure sensor detects system leaks
- **Automatic Zero Correction***
 - Eliminates baseline drift

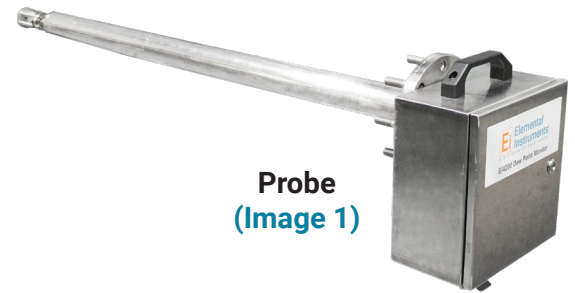

Probe
(Image 1)

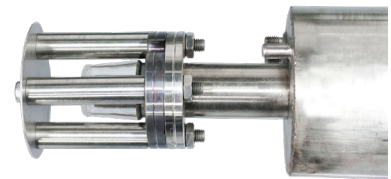


Sensor Assembly
(Image 2)

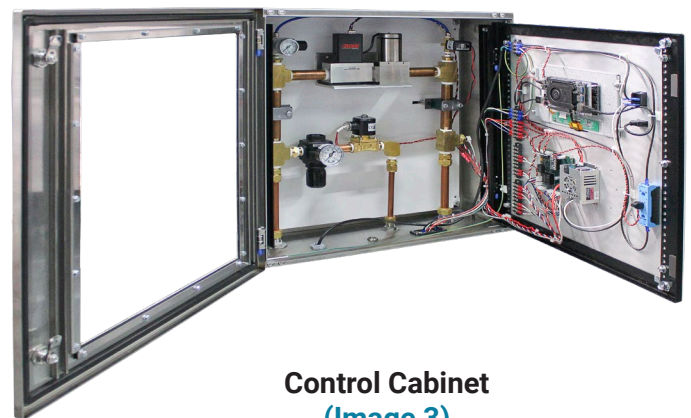

Control Cabinet
(Image 3)

Optional Components & Features

- **Automatic Sensor Cleaning System**
 - For high particulate applications
 - Pre-heated air blows off sensor surface
- **Flange Assembly (Image 4)**
 - To minimize process gas leaks during probe insertion/removal
- **Hastelloy Probe***
 - For highly corrosive applications

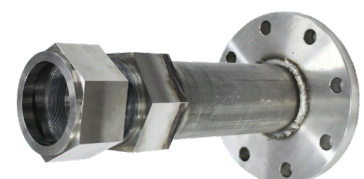

Flange Assembly
(Image 4)

*New Feature

Ei4200 DPM Specifications

Measurement Specifications

Dew Point Range	50 to 700 °F (10 to 371 °C) (dependent on cooling air and process temperature)
Accuracy	Within +/- 2 °C of operating range

Environmental Specifications

Probe	Process wetted materials 316 SS, Hastelloy, Borosilicate
Max Process Temp	900 °F (482 °C)
Control Cab. Ambient Temp Limits	-20 to 131 °F (-29 to 55 °C)
Probe Ambient Temp Limits	-20 to 149 °F (-29 to 65 °C)

Installation Specifications

Insertion Depth	Customizable
Probe Mounting	4" 150 lb ANSI Flange
Air/Nitrogen Requirement	75-150 psi (5.2-10.3 Bar), required flow dependent on process temp and expected dew point*

Control Cabinet

Electrical Requirements	120/240 VAC 50/60Hz, 20 Amp, 800 Watt dedicated circuit with fuse or circuit breaker protection hardwired to Control Cabinet
Analog Outputs	Two 4-20 mA signals
Modbus	Ethernet via Modbus TCP/IP
Alarms	Two dry contact outputs

* System can use up to 44 SCFM (1,250 LPM) in high temp/low dew point applications.



30350 Bruce Industrial Pkwy.
Cleveland, OH 44139

+1 440 264 2500 office
+1 888 876 2611 toll free
+1 440 264 2501 fax
www.ohiolumex.com

